



A32008

VALVE CORE TORQUE TOOL

The JB Industries valve core torque tool automatically sets proper torque to 5" pounds. Calibrated to precise torquing requirements for core valves, the tool will no longer tighten once proper torque is achieved. Eliminates guess work which results in under and over torquing. Works with all Schrader valve cores.

FEATURES

- Calibrated to precise torquing requirements for valve cores
- Automatically sets proper torque
- No longer tightens when proper torquing is achieved
- A must have for every technician
- Prevents leaks due to under or over torquing of cores

| PART NO. | DESCRIPTION |
|-----------|--|
| A32008 | Valve core torque tool |
| A32008-BX | Valve core torque tool counter display (12 pack) |



A32008-BX



A32008



JB INDUSTRIES

800.323.0811 JBIND.COM SALES@JBIND.COM