



ATLAS DS-20000

DIABLING AUTO SHUT-OFF FEATURE

ATLAS is set to automatically shut-off after 30 minutes if the weight reading does not change during that time. This feature can be disabled through the following procedure:

NOTE: Before attempting to disable the auto shut-off, verify the software version of your particular scale, as the instructions differ slightly depending on the software version installed. Verify the software version by powering up the scale and observing the display at start up. The software version will be shown as the scale initializes. Turn the scale off and proceed as follows based on the installed software version.

FOR VERSIONS 1.01 AND 1.02:

With the scale off, press the zero button (leftmost button) and the unit selection button (middle button) at the same time. While pressing these two buttons, also press the power button (rightmost button). The scale should power on and display "ATLAS version X.XX" briefly, then display a weight reading with "TEST MODE" below it.

FOR VERSION 1.03 AND HIGHER:

With the scale off, press and hold down the unit selection button (middle button), then press the power button (rightmost button). The scale should power on and display "ATLAS version X.XX" briefly, then display a weight reading with "TEST MODE" below it.

All remaining instructions are the same regardless of software version:

2. Press the unit selection button to toggle through the test mode options. The third option will show "AUTO OFF = YES".
3. Quickly press the zero button once; the display should now say "AUTO OFF= NO".
4. Press and hold the zero button to save this setting and exit test mode. You will see the words "TEST MODE" disappear. Once the scale exits test mode, only the weight reading will be displayed. You can now use your scale with the auto shut-off disabled.

If you wish to enable the auto shut-off feature again at some point, repeat the above procedure and change the setting to display "AUTO OFF= YES".

